



Spare parts list for the range:  
70812 - PRESTOCHEF

**PRESTO®**



70838  
DOUCHETTE PRESTO  
CHEF



90319  
SACHET 20 JOINTS  
FILTRE G2197



90659  
SACHET 2 CLAPETS  
ANTI-RETOUR POUR  
FLEXIBLE G3/8"



90804  
SACHET 2 BRISE JET  
F22X1 CPLT



90806  
SACHET 8 BRISE JET  
F22X1 CPLT



90875  
SACHET DE 25JOINTS  
PLATS G1/2



91153  
SACHET TETE  
CERAMIQUE 1/4 DE  
TOUR G3/4 ANTI-  
HORAIRE



91154  
SACHET TETE  
CERAMIQUE 1/4 DE  
TOUR G3/4 HORAIRE



91155  
SACHET MANETTE  
TETE CERAMIQUE



91156  
SACHET FLEXIBLES  
ALIM. G1/2 - M10x1 -  
Lg660



91157  
SACHET FLEXIBLE  
DOUCHETTE



91159  
SACHET BEC DOUBLE  
CINTRAGE A250 H58



91160  
SACHET BEC VERSEUR  
A250



91161  
SACHET BEC VERSEUR  
A300



91162  
SACHET FIXATION  
MURALE



91163  
SACHET SUPPORT  
DOUCHETTE



91164  
SACHET RESSORT  
FLEXIBLE DOUCHETTE



91165  
SACHET CLAPET  
DOUCHETTE



91166  
SACHET MANETTE  
DOUCHETTE



91167  
SACHET SELECTEUR  
DOUCHETTE



91168  
SACHET POIGNEE  
DOUCHETTE



91169  
SACHET 5 CLAPETS  
ANTI-RETOUR REGULE  
12L